



# INSTALLATION INSTRUCTIONS

## Part Number 28-20187

This filter fits: **See current AEM® catalog for complete listings**

With proper care, this filter will last the life of your vehicle. This filter may be used in a stock machine, and no modifications will be required. However there are special installation instructions, so please follow the procedures outlined below to ensure that the AEM® air filter seals properly.

### INSTALLATION

1. Loosen the hose clamp for the air intake hose and disconnect the hose from the Mass Air Sensor. (Fig. 1)
2. Carefully disconnect the electrical connector from the Mass Air Sensor, and then disconnect the wire harness holder from the lower Mass Air mounting stud. (Fig. 1)
3. Unfasten the two clips at the top of the air filter housing and remove the housing lid from the vehicle.
4. Remove the stock air filter.
5. Wipe out any dirt or dust that might be on the inside of the air filter housing. The airbox lid must be clean and dry so the gasket will stick to it.
6. Apply the self-adhering gasket around the sealing surface on the airbox lid. (Fig. 2)
7. Install the AEM® Air Filter into the airbox base.
8. Re-install the airbox lid by engaging the two tabs on the airbox lid into the two slots on the airbox base. Hold the top of the lid at an angle while engaging the tabs so you do not roll the gasket off the lid.
9. Fasten the two clips at the top of the airbox, re-install the air intake hose onto the Mass Air Sensor and tighten the hose clamp. Re-connect the electrical connector to the Mass Air Sensor and re-attach the wire harness holder back onto the lower Mass Air mounting stud.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**

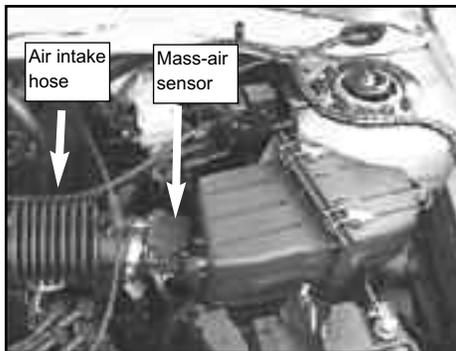


Fig. 1



Fig. 2