



Equipped with AEM® Dryflow™ Filter
No Oil Required!

INSTALLATION INSTRUCTIONS

PART NUMBER

21-806C (GUN METAL GRAY FINISH)

2014-15


Lexus

GS350

3.5L

Not legal for sale or use on any pollution controlled motor vehicle in California or states adopting California emission procedures. See AEMIntakes.com for CARB status on each part for a specific vehicle.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	21-2113DK	AIR FILTER; 3.25" X 7" DRYFLOW	1
2	2-1539C	INTAKE TUBE; 3.25"OD X 20", 21-759; GUNMETAL GRAY	1
3	20-8588	HEAT SHIELD, LEXUS GS350 3.5L 2015, MILD STL, TB/PC	1
4	5-325	HOSE; SILICONE 3.25 X 3.00" BLK	1
5	102472	EDGE TRIM; 3/4"BULB, 66"L	1
6	9452	1/2" BNDHOSE CLAMP,2.90"-3.75"	3
7	559960	WASHER, 8MM SOFT MOUNT	1
8	21685	WASHER; 1" X .300 X .100 RUBBER	2
9	22224	BOLT; M6X1.00X12 HEX; FLG, GRADE 10.9, GEO	2
10	07733	BOLT; M4 - 0.07 8MM, A/H CAP, SS	2
11	1-2108	BOLT; HEX/FLANGE M8-1.25 X 12	1

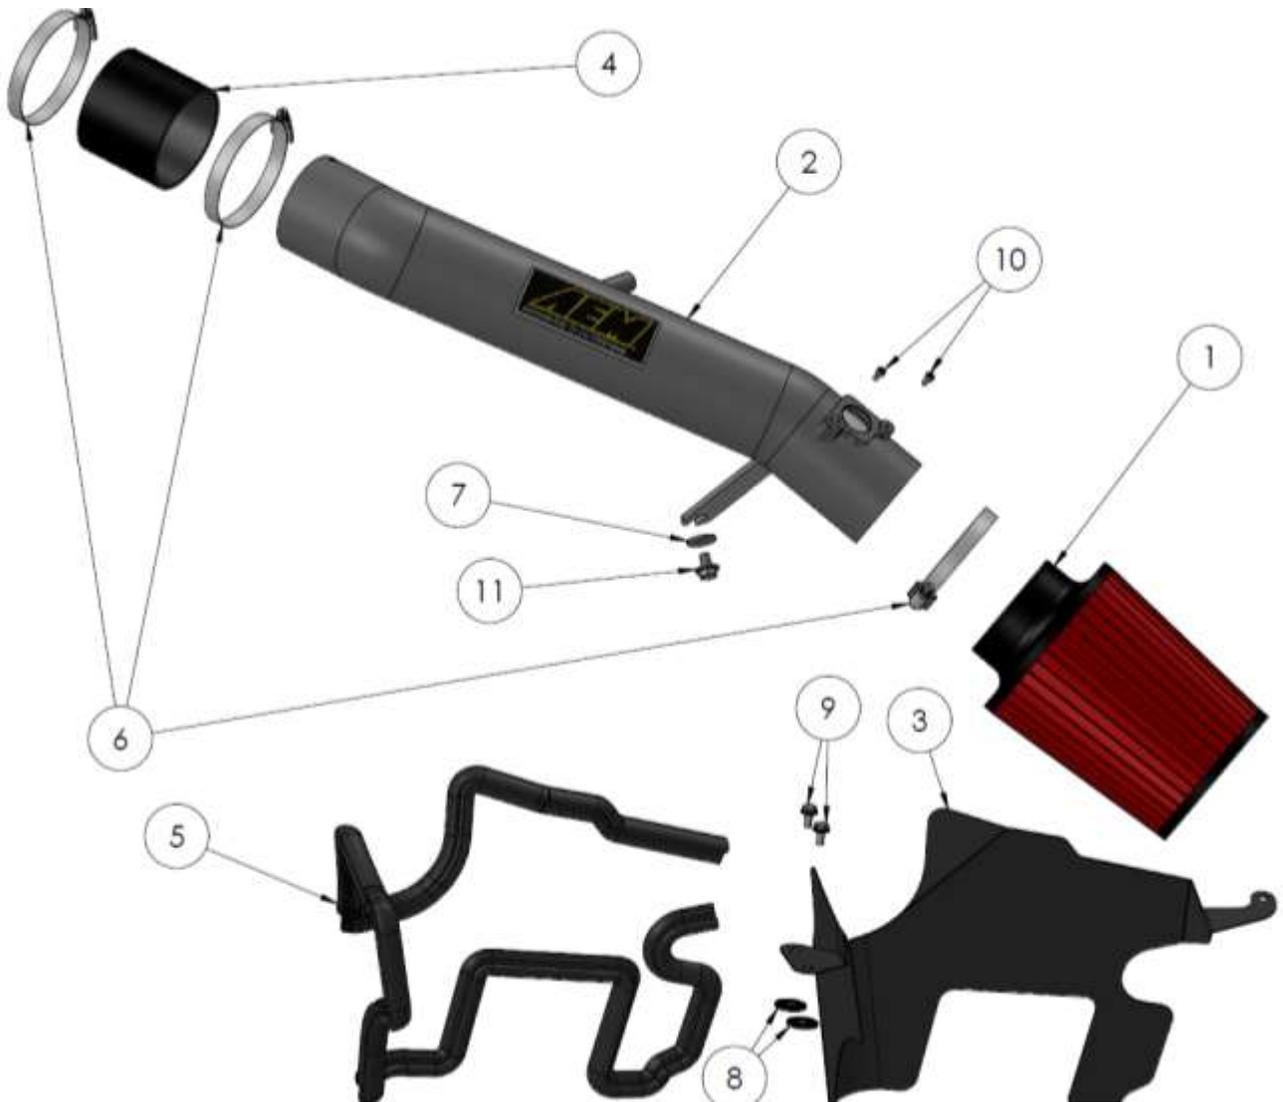

Read and understand these instructions **BEFORE** attempting to install this product. Failure to follow installation instructions and not using the provided hardware may damage the intake tube, throttle body and engine. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

1. Preparing Vehicle

- a. Make sure vehicle is parked on level surface.
- b. Set the parking brake.
- c. If engine has run in the past two hours, let it cool down.
- d. Disconnect negative battery terminal.
- e. Do not discard stock components after removal of the factory system.
- f. Open the air intake kit package and make sure all parts are included.

Tools Needed:

Screwdriver

10mm Socket

Socket Driver

Needle Nose Pliers

4mm Hex Key

12mm Wrench

Optional:

Small Torque

Wrench

2. Removal of stock system



a. Remove the plastic shroud over the air box by depressing the 4 plastic rivets and removing them.



b. Remove the plastic engine cover by pulling up gently to release the rubber grommets.



c. Disconnect the vent hose by pinching the spring clamp while pulling it from the factory tube.



d. Disconnect the Mass Air Flow (MAF) sensor by depressing the clip.



e. Use needle nose pliers to release the first wire tie clip on the factory air box.



f. Remove the two bolts securing the factory air box.



g. Loosen the factory hose clamp at the throttle body and remove the end of the factory tube from the throttle body.



h. Release the 4 latches on the air box securing the lid and factory tube. Remove the lid, factory tube, and filter from the engine bay.



i. Pull the air box base upwards and to your left to release it from the fresh air scoop and rubber grommet. Rotate the box upside down so the last two wire clips are accessible. Disconnect them and remove the box from the engine bay.



J. Remove the core support bolt. This bolt will be reused in step 3f.



k. Remove the MAF sensor from the upper part of the factory air box. The sensor will be reused in step 3a.
Note: Do not discard any of your stock equipment.

3. Installation of AEM[®] intake system.

- a. When installing the intake system, do not completely tighten the hose clamps or mounting hardware until instructed to do so.



a. Install the MAF sensor using the supplied bolts, then install the AEM DryFlow filter using the supplied hose clamp.



b. Apply the edge trim to the heat shield as shown.



c. Thread the included large bolt and washer onto the location shown on the side of the motor. Leave roughly 1/4" of space for the intake tube bracket.



d. Install the provided coupler and hose clamps onto the throttle body. Tighten the hose clamp closest to the throttle body at this time. Move the tube-side hose clamp as close to the throttle body as possible to allow room for tube installation.



e. Place the two included rubber washers over the mounting holes on the shock tower.



f. Install the heat shield as shown using the two provided bolts and the core support bolt removed earlier. The scoop position may need adjusting during installation.



g. Install the AEM intake tube into the coupler first, then lower the bracket into the gap between the washer installed in step 3c and the engine. Torque the hose clamp to 30 in-lb at this time.



h. Tighten the bracket using a 12mm wrench. This area can be accessed from the front of the engine. This picture is as seen from the shock tower looking downward.



i. Connect the factory vent hose to the AEM intake tube and secure with the factory spring clamp.



j. Connect the MAF sensor harness.



k. Reinstall the plastic shroud over the heat shield and filter using the plastic rivets removed in step 2a. Push the rivets into the popped-up position before installing them, then push them flush to secure.



l. Replace the plastic engine cover by lining up the rubber grommets with the posts on the engine and pushing down to secure.



STOCK INTAKE INSTALLED



AEM INTAKE INSTALLED

4. Reassemble Vehicle

- a. Position all kit components for best fitment. Ensure that no components contact any unintended part of the vehicle.
- b. Check for proper hood clearance. Re-adjust components if necessary and re-tighten them.
- c. Inspect the engine bay for any loose tools and ensured that all fasteners that were moved or removed are properly tightened.
- d. Reconnect negative battery terminal and start engine. Let the vehicle idle for 3 minutes. Perform a final inspection before driving the vehicle.

5. Service and Maintenance

- a. AEM Induction Systems requires cleaning the intake system's air filter element every 100,000 miles. When used in dusty or off-road environments, our filters will require cleaning more often. We recommend that you visually inspect your filter once every 25,000 miles to determine if the screen is still visible. When the screen is no longer visible some place on the filter element, it is time to clean it. To clean, purchase our Synthetic air filter cleaner, part number 1-1000 and follow the easy instructions.
- b. Use window cleaner to clean your powder coated AEM[®] intake tube.

NOTE: DO NOT USE aluminum polish on powder coated AEM[®] intake tubes.

For technical inquiries
e-mail us at
sales@aemintakes.com
or
call us at
800.992.3000

AEM Air Intake System Warranty Policy

AEM® warrants that its intake systems will last for the life of your vehicle. AEM® will not honor this warranty due to mechanical damage (i.e. improper installation or fitment), damage from misuse, accidents or flying debris. AEM® will not warrant its powder coating if the finish has been cleaned with a hydrocarbon-based solvent. The powder coating should only be cleaned with a mild soap and water solution. Proof of purchase of both the vehicle and AEM® intake system is required for redemption of a warranty claim.

This warranty is limited to the repair or replacement of the AEM® part. In no event shall this warranty exceed the original purchase price of the AEM® part nor shall AEM® be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM® must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is nontransferable. Improper use or installation, use for racing, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM® disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM®. Warranty returns will only be accepted by AEM® when accompanied by a valid Return Merchandise Authorization (RMA) number. Credit for defective products will be issued pending inspection. Product must be received by AEM® within 30 days of the date RMA is issued.

If you have a warranty issue, please call (800) 992-3000 and our customer service department will assist you. A proof of purchase is required for all AEM® warranty claims.

Not legal for sale or use on any pollution controlled motor vehicle in California or states adopting California emission procedures. See AEMIntakes.com for CARB status on each part for a specific vehicle.